



Aquavista 500R Light Installation Instructions

**WARNING!!! ALWAYS TURN OFF THE POWER AND UNPLUG
THE AQUARIUM BEFORE SERVICING**

Please read the instructions thoroughly before you begin servicing

Step 1

Power off Aquavista 500R



Step 2


Lift the aquarium cover.



Step 3


Unscrew **bottom** screw by light bulb power connector, and disconnect the power cord to the light ballast (*be careful with the screw, it is easy to drop in the aquarium*).

Unhinge the aquarium cover from aquarium, do it carefully with a flathead screwdriver, carefully wedge between the cover and the tank and pop it loose (*the hinge is fragile, do not apply strong pressure*).

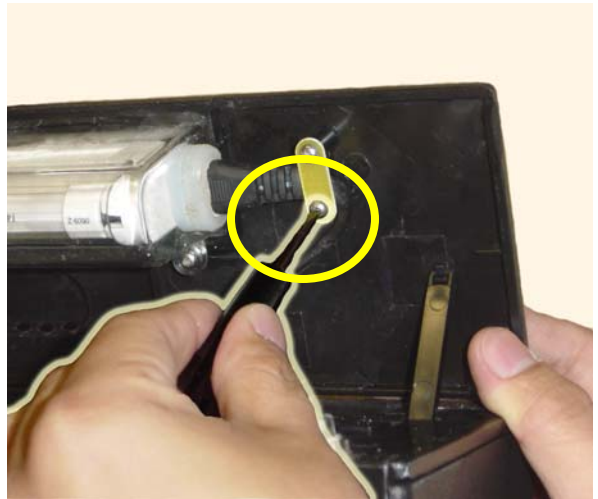

Step 4


Unscrew all screws with a size T8 Torx or a small flathead screwdriver.

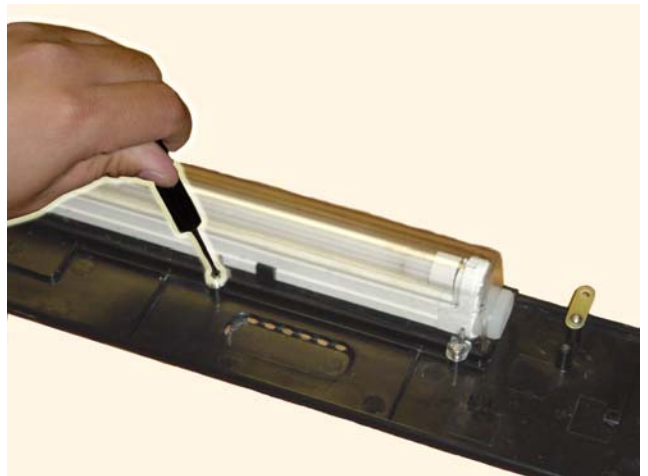

Step 5

Tilt lampshade from the screw side to loosen and remove the lampshade.

Slide out the aquarium lamp.

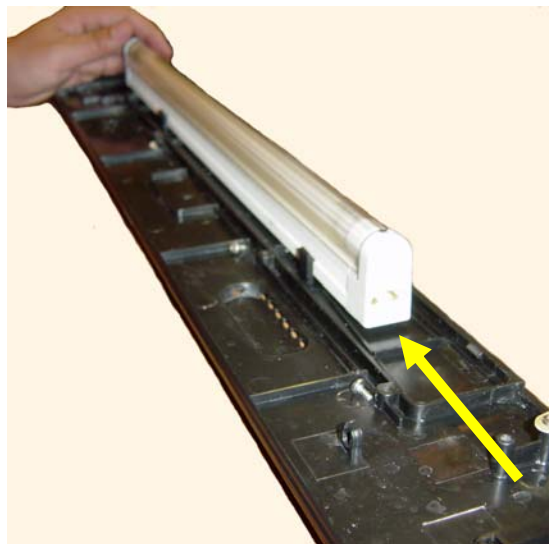


Step 6-8 is for light bulb replacement

Step 6


Remove the aquarium lamp cover by lifting it up from the top either side with a small flathead screwdriver.

Remove the light bulb by twisting the light bulb from the end, turn it until ballast and bulb connector are aligned and slide it out (*do not twist from the middle, it might break the light bulb, serious injury may occur*).

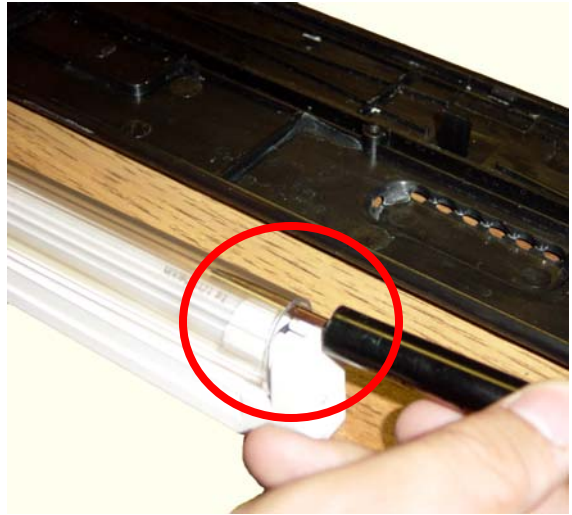

Step 7


Remove the light bulb by twisting the light bulb from the end, turn it until ballast and bulb connector are aligned and slide it out (*do not twist from the middle, it might break the light bulb, serious injury may occur*).

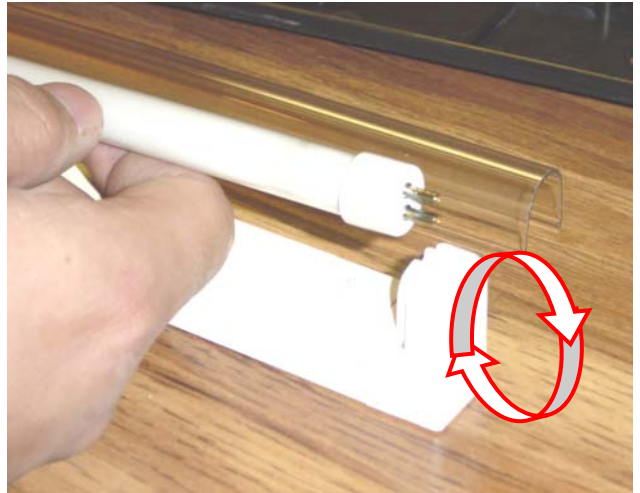

Step 8

Dispose broken light bulb properly, slide the new light bulb in, and fasten the bulb by turning it from the both end.

Place the aquarium light cover back.

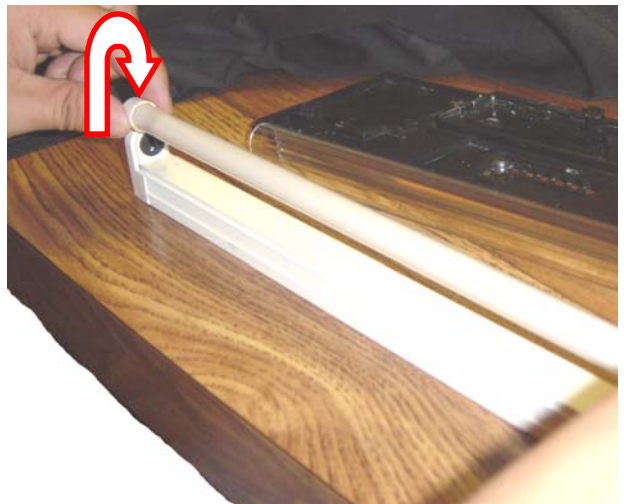

Step 9

Slide the aquarium light back to its proper mount.

Place lampshade back and fasten all screws.



Step 10

Snap the aquarium cover hinge back to the base; connect the power cord back to the ballast (*make sure it is plug in all the way*).

Fasten the screw by power cord to secure the cable.



Thank You for Your Time and Patience!

